




LeapPad™ LEARNING SYSTEM

Microphone

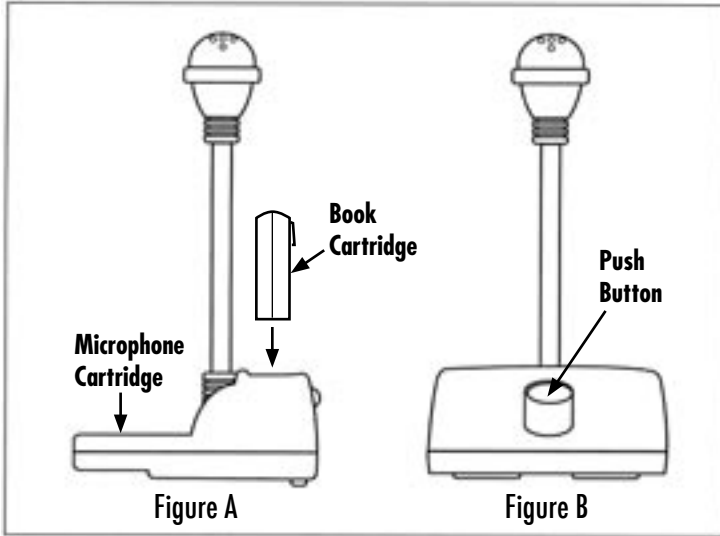

Please retain for future reference.

Instructions

1. Place LEAPPAD platform on a flat surface.
2. Insert the microphone cartridge into your platform.
3. Place the book cartridge into the top slot of the microphone cartridge (figure A).
4. Place the book into the platform.
5. Stabilize the microphone cartridge by lowering the extension feet on the bottom of the cartridge. This is achieved by depressing the push button on the back of the cartridge (figure B). Make sure that the feet rest on a solid surface. The extension feet are designed to prevent the cartridge from moving up and down excessively, as this may cause the audio to turn off.
6. Turn on the platform.
7. Each red circle ● in the book indicates a chance to record. Touch the circle to record.
8. Touch the green triangle ▶ to play back the recording.
9. To re-record, touch the red circle again.

Note: When platform is turned off, most of the recordings will be erased.



WARNING: Do Not Use This Product In Conjunction With Headphones As It May Cause The Headphones To Interfere With Other Transmitting Or Receiving Devices.

TROUBLESHOOTING

Symptom:	Try This:
Cartridge doesn't retain recorded audio	Replace batteries on LeapPad™
Strange noises are heard when LeapPad player is first turned on with the cartridge installed	<ul style="list-style-type: none"> • Turn LeapPad player OFF • Remove and reinsert cartridge • Turn LeapPad player ON again
LeapPad player suddenly makes strange noises while cartridge is in use	<ul style="list-style-type: none"> • Turn LeapPad player OFF • Remove and reinsert cartridge • Turn LeapPad player ON again • Avoid excessive jostling of microphone or cartridge during use

Battery Safety:

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard). DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

U.S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://lcanada.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

6401 Hollis Street, Suite 150, Emeryville, CA 94608
Phone: (800) 701-LEAP (5327)
Hours: Monday through Friday, 5:00 AM to 7:00 PM and Saturday 7:00 AM to 4:00 PM, Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.K. Office:

106 Oxford Road, Uxbridge, UB8 1NA, United Kingdom
Phone: 0800 169 5435
Eire: 00 44 1702 200244Hours: Monday through Friday, 9:00 AM to 5:00 PM.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog Logo, and LEAPPAD are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © LeapFrog Enterprises, Inc. U.S. Patent pending.

Visit our fun-filled Web site at: www.leapfrog.com For ages 4-8.