

More fun learning toys from LeapFrog!



Alphabet Pal™

12+ months

See & Learn™ Driver

12+ months



Fridge Farm™
Magnetic Animal Set

12+ months

Learning Friends™
Phonics Bus™

12+ months



Learning Band™ Walker

Baby's
steps set
this learning
band in
motion!



Parent Guide & Instructions

*This guide contains important information.
Please keep it for future reference.*

www.leapfrog.com

How to get the most out of your Learning Band™ Walker

Encourage Hands-On Learning!

The best way to reinforce learning is through a multi-sensory experience that involves sight, sound and touch!

- ★ Trace over the shapes on the trumpet roller, and do the same with your baby's finger, as you say the name of the shape and color/colour. For example, "Look, there's the blue square!"
- ★ Each calliope pipe features objects that match the numbers being counted. For example, the middle yellow pipe features 3 stars. Touch and count the numbers and objects on each pipe to introduce counting concepts to your child.

Explore a World of Letters!

Introducing the alphabet at an early age is a great way to help build a familiarity with letters.

- ★ Point out individual letters on the center drum. For example, point out the letter that is the first letter in your child's name.
- ★ Point out letters in baby's environment and help make letters a part of baby's everyday routine. Eventually, your child will have a great time pointing out all the letters he recognizes in the world around him.



Sing Along to a Rhyming Song!

Rhymes help build an understanding of speech sounds critical for language development.

- ★ Try turning the trumpet roller and singing along to the catchy rhyming songs. Rhyming words teach your child that different words can share some of the same ending sounds. Recognizing that words are made of sounds is a key pre-reading concept!

Take Big First Steps!

Upbeat tunes, learning songs, and moving instruments encourage baby to walk and push to make things happen!

- ★ When your child is able to stand steadily, encourage him to take those first steps using the Learning Band™ Walker. These early movements are the "first steps" in your child's cognitive exploration of the world around him! Of course, supervise your child carefully as he tests these new skills!



INSTRUCTIONS FOR PLAY

Parent-set volume control (push in and slide to select high or low volume).

Choose between Learn and Music modes.

Turn the trumpet roller!

Push the calliope button!

Spin the drum!

Getting Started:

- Turn on the LEARNING BAND™ Walker by sliding the mode selector to Learn or Music mode. The LEARNING BAND™ Walker will automatically turn off after 2 minutes of inactivity.

Configuring the LEARNING BAND™ Walker for Play:

Some adult assembly required. Refer to the included "Assembly and Use Instructions" for detailed information about how to assemble and use the LEARNING BAND™ Walker. Be sure to save these instructions for future reference.

The LEARNING BAND™ Walker can be played with as a floor toy (lowered position) by detaching the legs and storing them underneath the unit, or as a walker (upright position).

Use the LEARNING BAND™ Walker as a floor toy (with legs stored underneath) for children who are unable to stand steadily. Use as a walker only when child is able to stand steadily. AS WITH ALL TOYS FOR THIS AGE GROUP, ADULT SUPERVISION IS REQUIRED.

How to Play with the LEARNING BAND™ Walker:



Walker (upright position):

- Push the walker to hear an alphabet song. If baby stops pushing the walker, the song will stop. If baby continues pushing, the song will continue.
- As baby pushes, a motor will turn the red drum and make the calliope tubes go up and down!

Stationary Activities (lowered position):

- Spin the red drum to hear an alphabet song. When the drum stops spinning, the song will stop. If baby continues spinning the drum, the song will continue.
- Turn the trumpet roller to hear 3 different rhyming songs about shapes and colors/colours.
- Push the calliope button to hear a counting song 1–5 sung in different keys.



Walker (upright position):

- Push the walker to hear a fun song that encourages baby's first steps. If baby stops pushing, the song will stop. If baby continues pushing, the song will continue. The 3 stanzas of the song eventually count to 5.
- As baby pushes, a motor will turn the red drum and make the calliope tubes go up and down!

Stationary Activities (lowered position):

- Spin the red drum to hear 3 real drum sounds.
- Turn the trumpet roller to hear 3 real trumpet sounds.
- Push the calliope button to hear 3 real clarinet sounds.

Parent-Set Volume Control:

The volume control on this product features a special feature that lets parents control the volume. To change the volume between high and low, press down on the red volume control switch, and move it to)) or))) (low or high volume).

Care and Maintenance:

- Keep product away from foods and beverages
- Clean with a slightly damp cloth
- Never submerge product in water
- Remove batteries from product for prolonged storage
- Avoid exposing product to extreme temperatures

Battery Information:

Requires 4 AA (called LR6 in some countries) alkaline batteries, not included.

Battery Safety:

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).
- DO NOT use rechargeable batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.

Battery Installation:

1. Open the battery door (located underneath the unit on the calliope side of the walker) with a screwdriver.
2. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
3. Replace battery door securely.

TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> • Make sure batteries are correctly installed • Make sure battery cover is securely attached • Remove batteries and put them back in • Clean battery contacts with rubbing alcohol • Install new batteries
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> • Install new batteries • Clean battery contacts with rubbing alcohol
Toy makes improper responses	<ul style="list-style-type: none"> • Install new batteries • Clean battery contacts with rubbing alcohol

U. S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://lfcanada.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Friday, 5:00 AM to 7:00 PM and Saturday 7:00 AM to 4:00 PM, Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.K. Office:

Telephone: 0800 169 5435 Eire: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications.

Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog logo, LEARNING BAND, ALPHABET PAL, FRIDGE FARM, SEE & LEARN, LEARNING FRIENDS, and PHONICS BUS are registered trademarks or trademarks of LeapFrog Enterprises, Inc. U.S. Patent Pending.

Visit our fun-filled Web site at: www.leapfrog.com

For ages 9 months and up