

Parent Guide & Instructions


Dear Parent,

We at LeapFrog know that you are your child's most important teacher. Our goal is to help you build an environment for your child that is rich in experiences—one that encourages discovery and fosters learning success.

Babies and toddlers are discovering the world for the first time. That is why we developed learning toys that introduce critical discovery skills, including color and shape recognition, fine motor skill development, and social play. They come in playful colors, with engaging features that will captivate your child's imagination.

LeapFrog® learning toys are designed to grow alongside your child through each stage of development. All are made with the same playful spirit that promotes a lifelong love of learning. For additional information on how to make learning fun and effective, visit our Web site (www.leapfrog.com), where you'll find tips from parents and educators. We hope you'll join us there.

Sincerely,

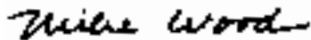

Mike Wood
President
LeapFrog Enterprises, Inc.

This guide contains important information.
Please keep it for future reference.



Get moving with this fun pull toy that sings the alphabet song, teaches letter names and sounds and plays 26 tunes!



Alphabet Pal™

More fun learning toys from LeapFrog!

Infant/Toddler



Learning Drum™
6 Months & up



Discovery Ball
6 Months & up



See & Learn™ Piano
6 Months & up



Counting Pal™
12 Months & up

Inspiring a Lifelong Love of Learning

MOTOR SKILLS

- ✓ Pressing shoes helps develop fine motor skills; pulling Alphabet Pal™ helps develop walking skills.

AUDITORY INTERACTION

- ✓ As little ones interact with Alphabet Pal, audio responses reinforce a positive learning experience.


COGNITIVE DEVELOPMENT

- ✓ Alphabet Pal teaches letters, letter sounds and colors.

LANGUAGE DEVELOPMENT

- ✓ Alphabet Pal introduces letter sounds, a step that helps reinforce language development.

INSTRUCTIONS FOR PLAY

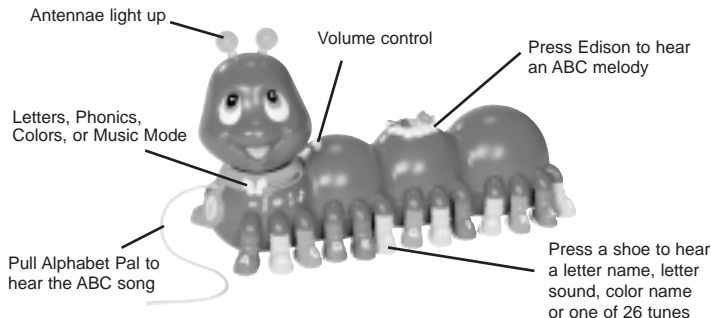

Turn On

- Turn on Alphabet Pal™ by sliding the mode switch from OFF to any mode.

Turn Off

- Turn off Alphabet Pal by sliding the mode switch to the OFF position. Alphabet Pal will also shut off after 15 seconds of inactivity.

How to Play with Alphabet Pal™

Letters Mode:



- Move the selector switch to Letters mode.
- Press a letter on any shoe to hear the letter's name.
- Pull Alphabet Pal to hear the ABC song.

Phonics Mode:



- Move the selector switch to Phonics mode.
- Press a letter on any shoe to hear the letter's primary phonetic sound.
- Pull Alphabet Pal to hear the ABC song.

Colors Mode:



- Move the selector switch to Colors mode.
- Press any shoe to hear the color of that shoe.
- Pull Alphabet Pal to hear the ABC song.

Music Mode:



- Move the selector switch to Music mode.
- Press any shoe to hear a short melody.
- Alphabet Pal plays 26 individual classic children's tunes.
- Pull Alphabet Pal to hear the ABC song.

Alphabet Pal plays the following melodies:

A – Are You Sleeping?	O – Old MacDonald Had a Farm
B – Billy Boy	P – Pop! Goes the Weasel
C – Clementine	Q – Chopsticks
D – Did You Ever See Lassie?	R – Row, Row, Row Your Boat
E – East Side, West Side	S – She'll Be Comin' Round the Mountain
F – The Farmer in the Dell	T – This Old Man
G – Greensleeves	U – Upside Down World
H – Hey Diddle Diddle	V – Froggie Went A-Courtin'
I – I've Been Working on the Railroad	W – Wheels on the Bus
J – Jimmy Crack Corn	X – Yellow Rose of Texas
K – Camptown Races	Y – Yankee Doodle
L – London Bridge	Z – Wait for the Wagon
M – Mary Had a Little Lamb	
N – The Man on the Flying Trapeze	

ABC Song:

- Pull Alphabet Pal to hear the ABC song.
- Push the Edison character button on top of Alphabet Pal to hear an ABC melody.

Caring for your Alphabet Pal:

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge Alphabet Pal in water.
- Remove batteries during prolonged storage.
- Avoid exposing Alphabet Pal to extreme temperatures.

Battery Information:

Batteries included are for in-store demonstration purposes only. Replace with new batteries to improve performance.

Battery Safety:

Batteries are small objects. Replacement of batteries must be done by adults.

Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy.

Dispose of used batteries properly.

Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries

(i.e. alkaline/standard).

DO NOT use rechargeable batteries.

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

TROUBLE SHOOTING	
Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> • Remove batteries and put them back in • Make sure battery cover is correctly secured • Clean battery contacts with rubbing alcohol • Install new batteries
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> • Install new batteries
Toy makes improper responses	<ul style="list-style-type: none"> • Check batteries

Battery Installation:

1. Requires 3 AA (called LR6 in some countries) alkaline batteries.
2. When the batteries run low on power, the toy's speech may become garbled or it may repeat itself. Replace the batteries at this time.
3. Open the battery door with a screwdriver.
4. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
5. Replace battery door securely.

Consumer Service contact:

email: support@leapfrog.com

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Friday, 9:00 AM to 5:00 PM, Pacific Time

UK Office:

Phone: 0800 169 5435

EIRE: 00 44 1702 200244

For additional help, please visit our Consumer Support Web site at <http://www.leapfrog.com/support>.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of three months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement will be covered under the original warranty or for 30 days, whichever is longer.

LeapFrog and the LeapFrog logo are registered trademarks of LeapFrog Enterprises, Inc. Alphabet Pal is a trademark of LeapFrog Enterprises, Inc. © 2001 LeapFrog Enterprises, Inc. All rights reserved.

U.S. Patent Number 5,997,304

MADE IN CHINA

Visit our fun-filled Web site at www.leapfrog.com

For ages 12 months and up