

Parent Guide & Instructions

Dear Parent,

We at LeapFrog know that you are your child's most important teacher. Our goal is to help you build an environment for your child that is rich in experiences—one that encourages discovery and fosters learning success.

Babies and toddlers are discovering the world for the first time. That is why we developed learning toys that introduce critical discovery skills, including color and shape recognition, fine motor skill development, and social play. They come in playful colors, with engaging features that will captivate your child's imagination.

LeapFrog® learning toys are designed to grow alongside your child through each stage of development. All are made with the same playful spirit that promotes a lifelong love of learning. For additional information on how to make learning fun and effective, visit our web site (www.leapfrog.com), where you'll find tips from parents and educators. We hope you'll join us there.

Sincerely,

Mike Wood

Mike Wood
President
LeapFrog Enterprises, Inc.

This guide contains important information.
Please keep it for future reference.



Learning is a **SLAM DUNK** with this basketball hoop that introduces numbers, counting and the alphabet!



Learning Hoops™
Basketball

More fun learning toys from LeapFrog!

Infant / Toddler



LeapStart™ Learning Table
6 months and up



Bake-a-Shape™ Sorter
6 months and up



StoryBlock™ Book
Tad's Counting Farm
9 months and up



Alphabet Pal™
12 months and up

LEAPBABY™

LEARNING BENEFITS



Seated or standing basketball play helps develop gross motor skills.



Colorful lights, realistic sounds and easy-grip basketballs provide a multi-sensory experience.




Basketball game introduces little ones to numbers 1-10 and letters A-Z.



Feedback and crowd cheers provide a positive & rewarding learning experience.

Parent Guide and instructions inside.

INSTRUCTIONS FOR PLAY

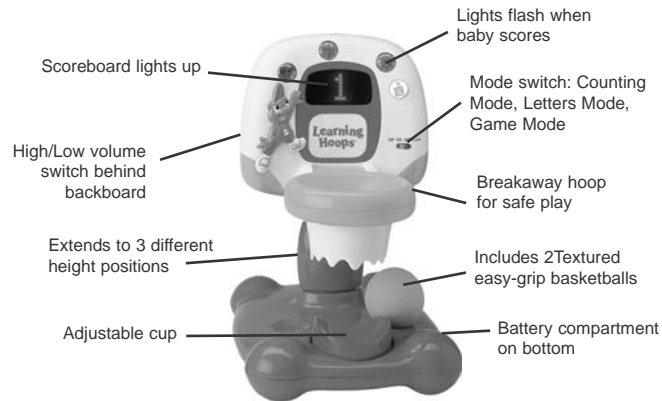

Turn On

- Turn on Learning Hoops by turning the mode switch from OFF to any mode **123 ABC C-A-T**

Turn Off

- Turn off Learning Hoops by turning the mode switch to the OFF position. Learning Hoops will shut off automatically after 30 seconds of inactivity.

How to Play with the Learning Hoops™ Basketball:

Counting mode:

- Move the selector switch to Counting Mode. **123**
- Drop or shoot basketballs through the hoop to see and hear numbers 1 to 10.

Letters mode:


- Move the selector switch to Alphabet Mode. **ABC**
- Drop or shoot basketballs through the hoop to see and hear letters A through Z.

Game mode:

- Move the selector switch to Game Mode. **C-A-T**
- Drop or shoot basketballs through the hoop to play a 3-letter word game.

Adjustable backboard:

- For sitting play, lower the post by pushing in both buttons located on the back of the backboard and push down.
- For standing play, simply pull the backboard upward and select one of 3 height positions.

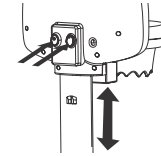

Adjustable cup on base:

Turn swivel cup on base to catch ball, or roll ball back to child.

Caring for your Learning Hoops™ product:

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures..

Battery Safety:

Batteries are small objects. Replacement of batteries must be done by adults.

Follow the polarity (+/-) diagram in the battery compartment.

Promptly remove dead batteries from the toy.

Dispose of used batteries properly.

Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).

DO NOT use rechargeable batteries.

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Battery Installation:

1. Requires 3 AA alkaline batteries.
2. When the batteries run low on power, the toy's speech may become garbled or it may repeat itself. Replace the batteries at this time.
3. Open the battery door with a screwdriver.
4. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
5. Replace battery door securely.

TROUBLE SHOOTING	
Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> • Remove batteries and put them back in • Make sure battery cover is correctly secured • Clean battery contacts with rubbing alcohol • Install new batteries
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> • Install new batteries
Toy makes improper responses	<ul style="list-style-type: none"> • Check batteries

Consumer Service contact:
email: support@leapfrog.com

Please visit our Consumer Support web site at <http://www.leapfrog.com/support> available 24 hours per day. You can search for frequently asked questions or submit a question to our support staff via email.

Telephone: (800) 701-LEAP (5327)
Hours: Monday through Friday, 5:00 AM to 7:00 PM
Saturday, 7:00 AM to 4:00 PM Pacific time

UK Office:
info@leapfrog.uk.net
Phone: 0800 169 5435
EIRE: 00 44 1702 200244

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
1) This device may not cause harmful interference, and
2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of three months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement will be covered under the original warranty or for 30 days, whichever is longer.

LEAPFROG and the LEAPFROG LOGO are registered trademarks of LeapFrog Enterprises, Inc. LEARNING HOOPS is a trademark of LeapFrog Enterprises, Inc. © 2002 LeapFrog Enterprises, Inc. All rights reserved.

MADE IN CHINA

Visit our fun-filled Web site at www.leapfrog.com

For ages 6 months and up

Part No. 600-01561