

More great learning toys from LeapFrog!



Touch and Tug™
Discovery Book

Birth +

Baby Counting Pal™

3+ months



Learning Band™ Walker

9+ months



Learning Friends™
Phonics Bus™

12+ months



Learn & Groove™
Activity Station

Learning begins
with each bounce,
babble, touch
and turn!



Parent Guide &
Instructions

This guide contains important information.
Please keep it for future reference.

www.leapfrog.com

How to get the most out of your Learn & Groove™ Activity Station

★ **Dance, Dance, Dance!**

The Learn & Groove™ Activity Station is designed to reward baby's early physical accomplishments, and you can help! Encourage your baby to experiment with movement by using your own hand and body movements to elaborate on the fun songs played by the activity station. In return, baby will use his own sounds, movements and facial expressions to interact with you!

★ **Play Games!**

Back-and-Forth! If you bat at the toys on the Learn & Groove™ Activity Station, your baby will likely mimic the behavior! Such interactions form the foundation for later communication skills, and can be baby's first lesson about taking turns.

Follow the Leader! Watch to discover which of the activities your child enjoys most, and then follow his lead to find out which ones are right for him at that time. As baby grows, you'll find that he moves his focus to different activities!



Peek-a-Boo! Sit just behind baby, and move around enough for him to see you. Keep popping into view and say a fun "peek-a-boo!" when you do. Eventually, your baby will learn how to push off with his feet and turn his body around to see you! These first attempts at movement are some of the simple building blocks to taking those important first steps!




★ **Learn Through Music!**

For infants, music brings many early learning elements together. It engages memory, imagination and language, and it can build self-confidence! Musical products with high-quality sound are one of the best ways to introduce music into your baby's life.

Sing along to the songs included in this product, and watch how your baby learns. Does he imitate you and eagerly wait for your next gesture or sound?

INSTRUCTIONS FOR PLAY

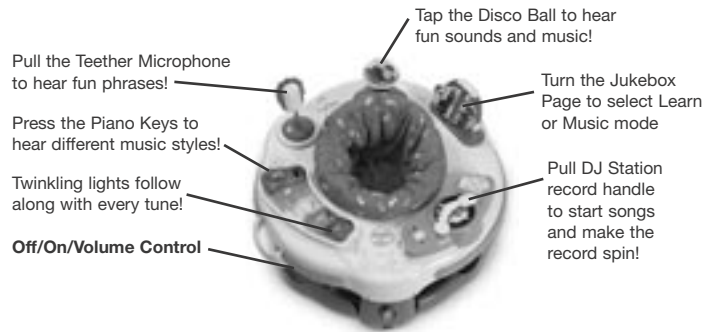

Getting Started:

Carefully follow the assembly instructions included with this product.

- Turn on the LEARN & GROOVE™ Activity Station by sliding the mode switch (located underneath the top tray, just below the piano activity) from OFF to LOW or HIGH.
- Turn off the LEARN & GROOVE™ Activity Station by sliding the mode switch to the OFF position. The product will turn off automatically after 30 seconds of inactivity.

How to Play with the LEARN & GROOVE™ Activity Station:

Note: Activities only operate when attached to the assembled LEARN & GROOVE™ Activity Station. Do not remove toy activities from this product.

Learn Mode:

Turn the Jukebox Page to Learn mode:

- The DJ Station plays an original LeapFrog ABC song.
- The Disco Ball introduces opposites.
- The Piano Keys introduce numbers and colors/colours with different musical styles.
- The Teether Microphone activates a fun phrase with each pull.

Twinkling lights follow along with every tune!

Music Mode:

Turn the Jukebox Page to Music mode:

- The DJ Station plays familiar nursery rhyme tunes.
- The Disco Ball plays different disco riffs with each press.
- The Piano Keys each introduce a new music style—Swing, Cha-Cha, Salsa, Tango or Jazz.
- The Teether Microphone activates a fun auditory reward with each pull.

Twinkling lights follow along with every tune!

Care and Maintenance:

- Keep product away from foods and beverages
- Clean with a slightly damp cloth
- Never submerge product in water
- Remove batteries from product for prolonged storage
- Avoid exposing product to extreme temperatures

Battery Information:

Requires 3 AA (called LR6 in some countries) alkaline batteries (not included).

Battery Safety:

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).
- DO NOT use rechargeable batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.

Battery Installation:

1. Locate battery compartment on the underside of the piano activity.
2. Open the battery door with a screwdriver.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

TROUBLESHOOTING

| Symptom: | Try This: |
|---|--|
| Toy does not turn on or does not respond | <ul style="list-style-type: none">• Make sure batteries are correctly installed• Make sure battery cover is securely attached• Remove batteries and put them back in• Clean battery contacts with rubbing alcohol• Install new batteries |
| Toy makes strange sounds or behaves erratically | <ul style="list-style-type: none">• Install new batteries• Clean battery contacts with rubbing alcohol |
| Toy makes improper responses | <ul style="list-style-type: none">• Install new batteries• Clean battery contacts with rubbing alcohol |

U. S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://lfcanada.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Friday, 5:00 AM to 7:00 PM and Saturday 7:00 AM to 4:00 PM, Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.K. Office:

Telephone: 0800 169 5435

Eire: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some counties and countries do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog logo, TOUCH AND TUG, COUNTING PAL, LEARNING BAND, LEARNING FRIENDS, PHONICS BUS, and LEARN & GROOVE are registered trademarks or trademarks of LeapFrog Enterprises, Inc.

Visit our fun-filled Web site at: www.leapfrog.com

For age 4+ mos to walking age.