

More fun learning toys from LeapFrog!

Learning Band™ Walker

9+ months




Learning Drum

6+ months



Learning Friends™ Phonics Bus™

12+ months

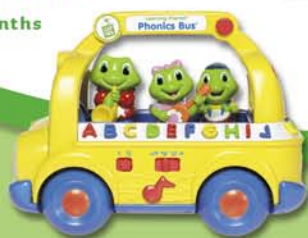

Fridge Farm™ Magnetic Animal Set

12+ months



LeapStart™ Learning Table

Turn musical discoveries into learning activities!



Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.
www.leapfrog.com

How to get the most out of your LeapStart™ Learning Table!

Introducing the fun of reading!

Adding a little fun to the experience of reading can help children develop a positive attitude toward books!

★ Encourage your child to flip the center page on the table back and forth. He will begin to understand that each turn transforms the table and changes the “story” from learning activities to musical activities. It’s baby’s first experience with a page-turner!

No matter what your baby’s age, reading provides a great opportunity for cuddling and socializing, as well as learning!

Developing memory skills!

Babies are hard at work developing memory skills—and often remember best the things that they love the most!

★ Encourage your baby to get familiar with all the different activities, sounds and actions she can produce using the LeapStart Learning Table. She will soon start remembering where her favorite activities are located and what each activity on the table offers.

Moving to music!

Real instrument sounds and upbeat melodies offer a fantastic introduction to music and movement. Melodies are not only fun to listen to, but also encourage movement, which is an important step in motor skill development.

★ Flip the center page to music mode and start playing the piano keys. Sway to the beat of music and encourage your baby to do the same! Your baby will begin to recognize the different tempos, pitches and beats every melody has to offer and start developing his own sense of rhythm.


Experiencing hands-on learning!

Babies learn best when they are offered a variety of activities to see, hear and touch. With the LeapStart Learning Table, babies are not only rewarded with sparkling lights and real instrument sounds, but also activities to spin, slide, open, close, tap and roll!

★ Encourage your child to explore every side of the table and play with all of the different activities. With every action, she will discover a different reaction that will stimulate her senses in different ways. No matter what your baby’s age, the table provides a great way to tickle your baby’s senses and develop her fine motor skills.



INSTRUCTIONS FOR PLAY

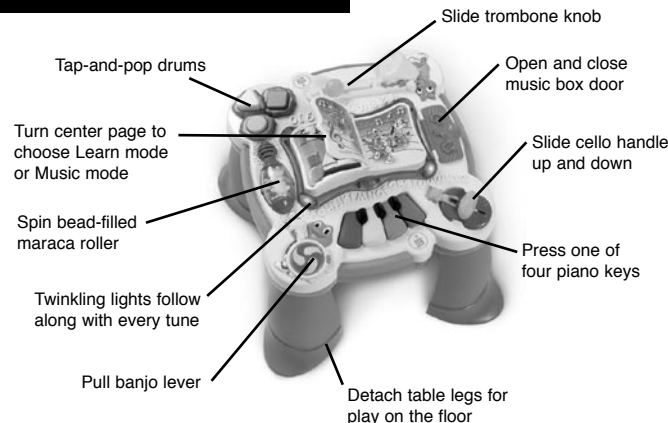

Getting Started

Use the LEAPSTART™ Learning Table as a floor toy (without legs) for infants. Use as an activity table only when child is able to stand steadily. As with all toys for this age group, adult supervision is recommended.

Note that the Power/Volume Switch is located underneath the base of the product.

Turn On:

- Slide the switch from OFF to the))) or)) position, depending on the volume level you prefer.

Turn Off:

- Slide the switch from))) or)) to the OFF position. The LEAPSTART™ Learning Table will shut off automatically after 30 seconds of inactivity.

How to Play with the LEAPSTART™ Learning Table

Learn Mode:

Turn center page to Learn Mode

- Cello introduces opposites: up/down and high/low
- Piano keys introduce colors
- Banjo introduces cause & effect
- Maraca introduces an ABC song
- Drums introduce shapes and colors
- Trombone introduces numbers
- Open and close music box door to hear auditory rewards

Twinkling lights follow along with every tune!

Music Mode:

Turn center page to Music Mode

- Cello slider plays 2 short cello tunes
- Piano keys play 4 jazzy tunes
- Banjo spinner plays 14 lively tunes
- Maraca roller plays 13 melodies
- Drum buttons play 3 different drum sounds
- Trombone slider plays a jazzy sound
- Open and close music box door to hear 2 cool songs

Twinkling lights follow along with every tune!

Music List:

Banjo Spinner

• Froggy Went-A-Courtin' • Billy Boy • Clementine • The Farmer in the Dell • I've Been Working on the Railroad • Camptown Races • Mary Had a Little Lamb • Old MacDonald Had a Farm • She'll Be Comin' Round the Mountain • Oh Where, Oh Where Has My Little Dog Gone • Wait for the Wagon • Turkey in the Straw • Alouette • Six Little Ducks

Maraca Roller

• Frères Jacques • Man on the Flying Trapeze • Greensleeves • Hey Diddle Diddle • Jimmy Crack Corn • London Bridge • Pop! Goes The Weasel • Row Your Boat • This Old Man • Upside Down World • The Yellow Rose Of Texas • Jack & Jill • Cat Rag

Caring for the LEAPSTART™ Learning Table:

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth (cold water) and mild soap.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

Battery Safety:

Batteries are small objects. Replacement of batteries must be done by adults.

Follow the polarity (+/-) diagram in the battery compartment.

Promptly remove dead batteries from the toy.

Dispose of used batteries properly.

Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).
- DO NOT use rechargeable batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte.

Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles.

Enlevez rapidement les piles usagées du jouet.

Suivez les procédures adéquates pour vous débarrasser des piles usagées.

Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

- NE PAS INCINÉRER les piles usagées.
- NE PAS JETER les piles au feu, car elles peuvent exploser ou fuir.
- NE PAS MÉLANGER piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).
- NE PAS UTILISER de piles rechargeables.
- NE PAS RECHARGER des piles non rechargeables.
- NE PAS COURT-CIRCUITER les terminaux d'alimentation.

Battery Installation:

1. Requires 3 AA (called LR6 in some countries) alkaline batteries (not included).
2. Open the battery door with a screwdriver.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> • Make sure batteries are correctly installed • Make sure battery cover is securely attached • Remove batteries and put them back in • Clean battery contacts with rubbing alcohol • Install new batteries
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> • Install new batteries • Clean battery contacts with rubbing alcohol
Toy makes improper responses	<ul style="list-style-type: none"> • Install new batteries • Clean battery contacts with rubbing alcohol

U.S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://lcanada.custhelp.com>, 24 hours a day. You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

U.K. Office:

Telephone: 0800 169 5435 | Fire: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog logo, LEAPSTART, LEARNING BAND, FRIDGE FARM, LEARNING FRIENDS and PHONICS BUS are trademarks or registered trademarks of LeapFrog Enterprises, Inc. Copyright © LeapFrog Enterprises, Inc. All rights reserved.

Visit our fun-filled Web site at: www.leapfrog.com

For ages 6 months and up

Convient aux enfants à partir de 6 mois

Part No. 605-10219-A