




Tag™ Reader Settings and Help

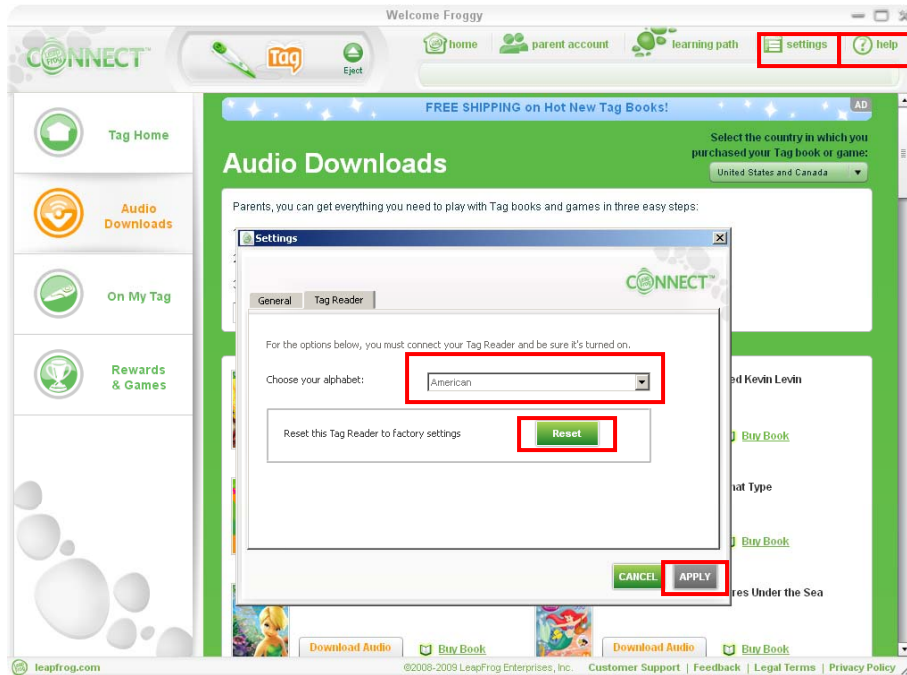

To change the settings for the LeapFrog Connect Application and your child's Tag™ Reader, click on the **settings** tab at the top of the screen.

On the Tag Reader tab, you can set the alphabet to either the American or Canadian/Queen's English alphabet, which changes the zee/zed letter.

If you need to restore your child's Tag Reader because it isn't functioning properly, click the **Reset** button. If you do this, you will need to resave the audio for all your child's books back onto the Tag Reader.

To apply these changes click the **APPLY** button.

If at any point you have a question about Settings or any other aspect of the LeapFrog Connect Application, click the **help** button on the top toolbar.